

Gebrauchs- und Pflegeanleitung Jumper Mini

Mit dem Jumper Mini haben Sie sich für ein TOGU Markenprodukt „made in Germany“ entschieden! Als Sportgerät ist es entsprechend den geltenden EU Regelungen produziert und enthält keine verbotenen Phthalate und keine Schwermetalle.

Der Jumper Mini als Trampolinball ermöglicht durch die bewährte Dynair-Technik zum einen eine optimale Druckverteilung und zum anderen einen extrem dynamischen Rebound (Trampolineffekt). Der Jumper Mini eignet sich deshalb sowohl für Sprung- und Schnellkrafttraining als auch für Koordinations- und Balancetraining. Durch seine besonderen Materialeigenschaften wird ein Ab- oder Wegrutschen wirkungsvoll verhindert.

Der Jumper Mini wird entlüftet geliefert. Vor Gebrauch muss das Gerät belüftet werden. Gehen Sie dabei wie folgt vor:


1) Belüften:

Mit Hilfe der beiliegenden Pumpe wird der Jumper Mini auf seine optimale Größe = ca. 18 cm Höhe aufgepumpt. Vor dem Aufpumpen muss das Gerät Raumtemperatur haben. Ansonsten kann es zu einer Überdehnung bzw. einer zu geringen Spannkraft des Produktes kommen. Die Nadel vor dem Einführen in das Ventil bitte **anfeuchten**. Das Ventil zwischen Daumen und Zeigefinger anheben, dann die Nadel **vorsichtig und gerade einführen**. Siehe Abb.



2) Entlüften:

Falls der Jumper Mini zu groß aufgepumpt wurde oder eine geringere Spannkraft erwünscht ist, wird die Nadel ohne die Pumpe in das Ventil eingeführt, die Luft entweicht und bei Erreichen der gewünschten Größe bzw. Spannkraft wird die Nadel herausgezogen. Siehe Abb.

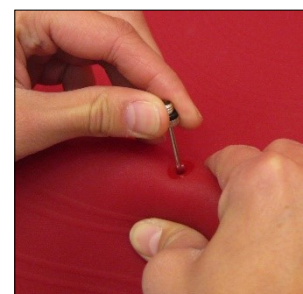

Warnhinweise:

- Die Befestigungsschrauben der Bodenplatte sind werkseitig mit dem richtigen Drehmoment angezogen. Bitte nicht nachziehen!
- direkte Sonneneinstrahlung bzw. Lagerung in der Nähe von Wärmequellen vermeiden, da sich sonst der Jumper Mini verformen kann und dadurch die Rücksprungeigenschaften verändern können.
- Kontakt mit scharfen und spitzen Gegenständen (z. B. Glassplitter / spitze Steine in Schuhsohlen) vermeiden, da diese den Jumper Mini beschädigen können. Das Gerät nicht werfen!
- Beim Üben und Springen auf dem Jumper Mini darauf achten, dass das Umfeld in einem Radius der Körperlänge des Benutzers frei von Gegenständen ist, die den Benutzer verletzen können.
- Entweder mit Sportschuhen oder barfuß auf dem Jumper Mini springen/trainieren, niemals mit Socken.
- Vor jeder Benutzung des Jumper Minis sollte dieser auf eventuelle Beschädigungen untersucht werden, da ansonsten kein sicherer Umgang mit dem Produkt gewährleistet ist.
- Der Jumper Mini muss auf einer waagrechten, stabilen und trockenen Bodenfläche stehen, damit sichergestellt ist, dass der Jumper Mini während des Springens bzw. der Übungen nicht seitlich wegrutschen kann.
- Kinder sollten den Jumper Mini nur unter Aufsicht von Erwachsenen nutzen.

Pflegehinweise:

Der Jumper Mini ist so gestaltet, dass er äußerst widerstandsfähig gegenüber äußeren Einflüssen ist. Von Zeit zu Zeit sollten Sie den Jumper Mini allerdings mit einem milden Haushaltsreiniger säubern. Verwenden Sie auf keinen Fall säurehaltige oder ätzende Reinigungsmittel! Achten Sie vor allem darauf, dass die weiche Antirutsch Beschichtung (ringförmige elastische Auflagefläche des Jumper Minis an der Unterseite), die dem Jumper Mini seine besondere Standfestigkeit gibt, stets frei von Schmutz und Verunreinigungen und trocken ist.

Wichtig: Maximales Benutzergewicht: 120 kg; geeignet für Kinder ab 3 Jahren

Jumper Mini Instruction Manual

Congratulations on your purchase of this Jumper Mini! You have chosen a TOGU branded product which is "Made in Germany"! This sports tool was produced in compliance with valid EU norms. It is free of forbidden phthalates and heavy metals.

The Jumper Mini ball-shaped trampoline comes with the tried and tested Dynair technology, enabling optimum distribution of pressure and an extremely dynamic rebound effect (trampoline action). This makes the Jumper Mini eminently suitable for jumping, hopping, coordination and balance exercises. It is made of special material designed for the effective prevention of slipping.

The Jumper Mini is delivered in its deflated state. Before use, please inflate the Jumper Mini like in instructed here:


1) Inflate:

Please inflate the Jumper Mini with the included pump to its optimal size (ca. 18 cm). Before inflating, please be sure that the Jumper Mini has room temperature. Otherwise the product will be overstretched or insufficiently tensioned. Please moisten the needle and lift up the valve between your index finger and your thumb. Then insert the needle carefully and straight and be careful to not puncture the material with the needle. **See Picture.**



2) Deflate:

If the Jumper mini has been overinflated or less tension is required, insert the needle into the valve without the pump. The air will be released through the needle. Pull out the needle when enough air has escaped to get the required size or tension. **See Picture.**

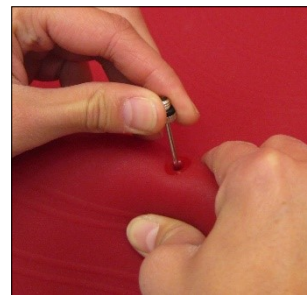

Warnings:

- Screws of the stability plate are tightened with the right turning moment. Please do not tighten yourself!
- Avoid direct sunlight and do not store near sources of heat as this may affect the shape of the Jumper Mini and alter its rebound action.
- Avoid contact with sharp and pointed objects (e.g. glass splinters / stones in soles of shoes) as these can damage the Jumper Mini. Do not throw the Jumper Mini!
- When exercising and bouncing on the Jumper Mini, sufficient clear space should be allowed around the Jumper Mini (the length of the user's body) to prevent injury to the user.
- Always wear trainers when using the Jumper Mini or train barefoot, but never use the product while wearing socks.
- Check the Jumper Mini for signs of damage before use as the product cannot be guaranteed safe for use if damaged.
- The Jumper Mini must be placed on a horizontal, stable and dry floor surface to ensure that the Jumper Mini cannot skid off to one side during use.
- Children should use the Jumper Mini only under supervision of adults.

Care instructions:

The Jumper Mini is designed to be highly durable and hard-wearing. However, from time to time you should clean the Jumper Mini with a mild household detergent. Do not use caustic detergents or cleaning agents containing acid! First and foremost, you should always make sure that the soft anti-skid coating (circular rubber surface on base of Jumper Mini), which gives the Jumper Mini its exceptional stability, is always clean and dry.

Important: Maximum permissible load: 120 kg, Suitable for children from 3 years